



**PCT2735Q**  
**Touch LED LCD Monitor**

**USER'S GUIDE**

[www.planar.com](http://www.planar.com)

This document may not be copied in any form without permission from Planar. Information in this document is subject to change without notice.

### **Trademark Credits**

Windows™ is a trademark of Microsoft Corp.

The terms HDMI, HDMI High-Definition Multimedia Interface , HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc . All other companies are trademarks or registered trademarks of their respective companies.

### **Disclaimer**

The information contained in this document is subject to change without notice. Planar Systems, Inc. makes no warranty of any kind with regard to this material. While every precaution has been taken in the preparation of this manual, the Company shall not be liable for errors or omissions contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

### **Energy Star**



ENERGY STAR is a program run by the U.S. Environmental Protection Agency ( EPA ) and U.S. Department of Energy ( DOE ) that promotes energy efficiency. This product qualifies for ENERGY STAR in the " factory default " settings and this is the setting in which power savings will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR rating. For more information on the ENERGY STAR program, refer to [energystar.gov](http://energystar.gov).

# Content

- Operation Instructions.....2
- Unpacking Instructions .....4
- Safety Precautions .....4
- Consignes de sécurité .....5
- Package Overview .....6
- Front View of the Product .....7
- Rear View of the Product .....8
- Quick Installation .....9
- Basic Operation and Calibration/Reset Instructions..... 10
- Advanced Operation—OSD Menu..... 12
- Supporting Timing Modes ..... 15
- Technical Information ..... 16
- Wall-Mount Installation Instructions ..... 17
- Troubleshooting..... 18
- Planar Support ..... 19

## Operation Instructions

Thank you for purchasing the PCT2735Q multi-touch, edge-lit LED LCD monitor. Please read this guide thoroughly before installation.

### FCC RADIO FREQUENCY INTERFERENCE STATEMENT WARNING: (FOR FCC CERTIFIED MODELS)

This LED Monitor has been tested and found compliant with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide proper protection against harmful interference to a residential installation. This Touch LED LCD Monitor generates, uses, and can radiate radio frequency energy. Harmful interference to radio communication may be the result if it's not properly installed and used. However, there is no guarantee that interference will not occur in a particular installation. If this Touch LED LCD Monitor does cause serious interference to radio or television reception, resetting may correct it. Moreover, users are encouraged to reduce interference by doing one or more of the following:

- Reorient or relocate the receiving antenna.
- Move the Touch LED LCD Monitor and the receiver further away from each other.
- Connect the Touch LED LCD Monitor into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local dealer or a qualified technician.

### FCC Warning:

To assure a continued FCC compliance, a user must use a grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. Also, any unauthorized changes or modifications to this Touch LED LCD Monitor would void the user's authority to operate this device.

**Note:** If necessary, shielded interface cables and AC power cord must be used to meet the emission level limits.



### Important Waste Disposal Information

Please recycle or dispose of all electronic waste in accordance with local, state, and federal laws. Additional resources can be found online at <http://www.planar.com/about/green/>.

The crossed-out wheeled bin symbol is to notify consumers in areas subject to Waste Electrical and Electronic Equipment (WEEE) Directive 2012/19/EU that the product was placed on the market after August 13, 2005 and must not be disposed of with other waste. Separate collection and recycling of electronic waste at the time of disposal ensures that it is recycled in a manner that minimizes impacts to human health and the environment. For more information about the proper disposal of electronic waste, please contact your local authority, your household waste disposal service, or the seller from whom you purchased the product.

## COMMUNIQUE D'AVERTISSEMENT DE LA FCC CONCERNANT LES INTERFERENCE DE FREQUENCE RADIO: (SEULEMENT POUR MODELES CERTIFIE PAR LA FCC)

Ce moniteur a été testé et à été trouvé conforme aux limites pour un appareil numérique de Classe B, suivant la partie 15 des règlements de la FCC. Ces limites ont été développées pour offrir une protection satisfaisante contre les interférences nuisibles dans une installation résidentielle. Ce moniteur génère, utilise et peut radier de l'énergie de fréquence radio. Ceci peut causer des interférences nuisibles à des communication radio si l'appareil n'est pas convenablement installé et utilisé. Il n'y à néanmoins aucune garantie que des interférences n'apparaîtront pas dans une installation particulière. Si ce moniteur cause de sérieuses interférences à la réception de signaux radios ou télévisées, une possibilité est de réinitialiser le moniteur. Les usagers sont aussi encouragés à corriger les interférences en appliquant une ou plusieurs des démarches suivantes:

- Réorientez ou déplacez l'antenne de réception.
- Placez le moniteur et le récepteur plus loin l'un de l'autre.
- Connectez le moniteur à une prise différente de celle à laquelle le récepteur est connecté.
- Consultez votre revendeur local ou un technicien qualifié.

### Avertissement de la FCC:

Pour assurez une conformité continue au règlements de la FCC, l'utilisateur doit utiliser un cordon d'alimentation mis à terre et le câble d'interface vidéo protégé avec noyaux en ferrite, fourni avec l'appareil. Chaque modification ou changement non-autorisé appliqué à ce moniteur peut faire perdre à l'utilisateur sont droit d'opération de cet appareil.

**Note:** Si nécessaire, des câbles d'interface protégés et un cordon d'alimentation alternante doivent être utilisé pour être conforme aux limites d'émission.

### Consigne de tri (pour la France uniquement)



## Unpacking Instructions

- Remove the Touch LED LCD Monitor out of the package and take off the plastic bag and Polystyrene Foam.
- Pull the base from Parallel versus Panel to Vertical.
- Adjust the Panel between 15° leaning forward and 70° leaning backward.

## Safety Precautions

Follow all warnings, precautions and maintenance as recommended in this user's manual to maximize the life of your unit.

### **Do:**

- Turn off the product before cleaning.
- Touch screen surface may be cleaned using a soft clean cloth moistened with mild window glass commercial cleaners or 50/50 mixture of water and isopropyl alcohol.
- Use a soft cloth moistened with mild detergent to clean the display housing.
- Disconnect the power plug from AC outlet if the product is not going to be used for an extended period of time.

### **Don't:**

- Do not touch the LED Display screen surface with sharp or hard objects.
- Do not use abrasive cleaners, waxes or solvents for your cleaning.
- Do not operate the product under the following conditions:
  - Over 16 hours per day.
  - Extremely hot, cold or humid environment.
  - Areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - In direct sunlight.
- If smoke, abnormal noise or odor emits from your Touch LED LCD Monitor, remove the power cord immediately and call your service center.
- Never remove the rear cover of your Touch LED LCD Monitor. The display unit inside contains high-voltage parts and may cause electric shock.
- Never try to repair your Touch LED LCD Monitor yourself. Always call your service center or a qualified technician to fix it.
- Due to safety concerns, if the VESA mounting kit is purchased separately, please make sure the mounting kit is UL-listed, and replaceable only by service personnel.

## Consignes de sécurité

Respectez tous les avertissements, les précautions et conseils d'entretien recommandés dans ce manuel de l'utilisateur pour maximiser la durée de vie de votre appareil.


### **A faire :**

- Éteindre le produit avant de le nettoyer.
- La surface de l'écran tactile peut être nettoyée avec un chiffon doux et propre imprégné d'un nettoyant doux du commerce pour vitres ou d'un mélange à 50/50 d'alcool isopropylique et d'eau.
- Utilisez un chiffon doux imprégné d'un détergeant doux pour nettoyer le carter de l'affichage.
- Débranchez la fiche d'alimentation de la prise de courant secteur si le produit ne doit pas être utilisé pendant une période prolongée.

### **A ne pas faire :**

- Ne touchez pas la surface de l'écran LED avec des objets coupants ou durs.
- N'utilisez pas des produits de nettoyage abrasifs, de la cire ou des solvants pour le nettoyage.
- N'utilisez pas le produit dans les conditions suivantes :
  - Plus de 16 heures par jour.
  - Environnement extrêmement chaud, froid ou humide.
  - Endroits poussiéreux ou sales.
  - Près d'appareils générant un fort champ magnétique.
  - Sous la lumière directe du soleil.
- Si de la fumée, un bruit anormal ou une odeur s'échappait de votre moniteur LCD LED, débranchez immédiatement le cordon d'alimentation et appelez votre centre de réparation.
- Ne retirez jamais le couvercle arrière de votre moniteur LCD LED. L'unité d'affichage contient des éléments où circule un voltage élevé et présentant un risque d'électrocution.
- N'essayez jamais de réparer vous-même votre moniteur LCD LED. Faites toujours appel à votre centre de service ou à un technicien qualifié pour toute réparation.
- Pour des raisons de sécurité, si vous achetez séparément le kit de fixation VESA, assurez-vous que celui-ci est certifié UL, et qu'il peut être remplacé uniquement par un technicien qualifié.


## Package Overview

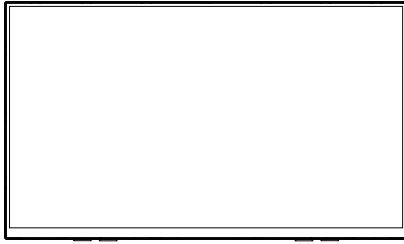


Touch LED LCD Monitor




Power Cord

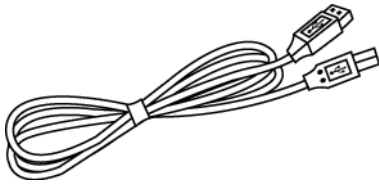

USB Cable (A to B)

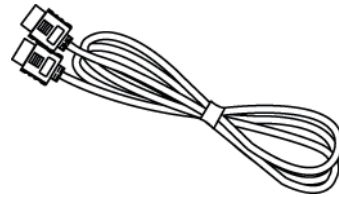

**HDMI**® Cable

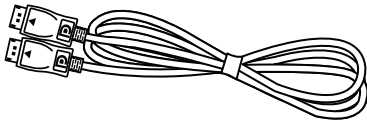

DP Cable



Cleaning Cloth




User's Guide



Cable Wrap




## Front View of the Product

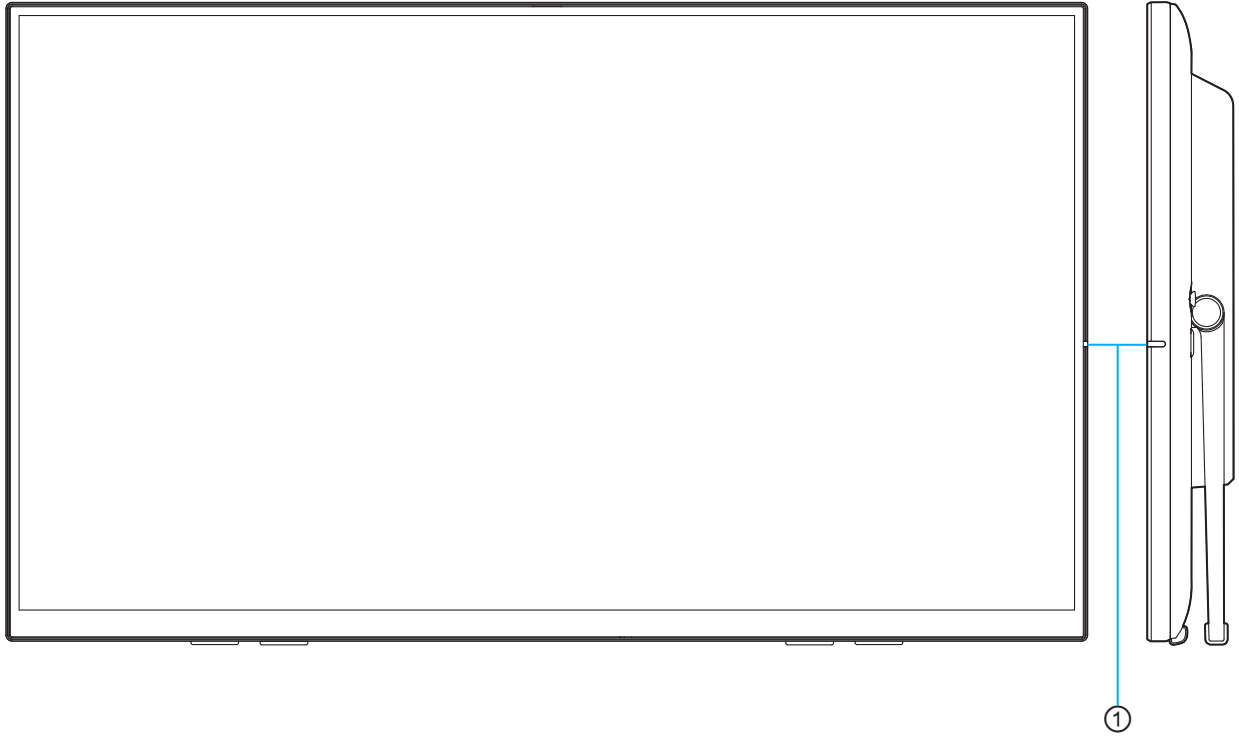

① LED Indicator

## Rear View of the Product

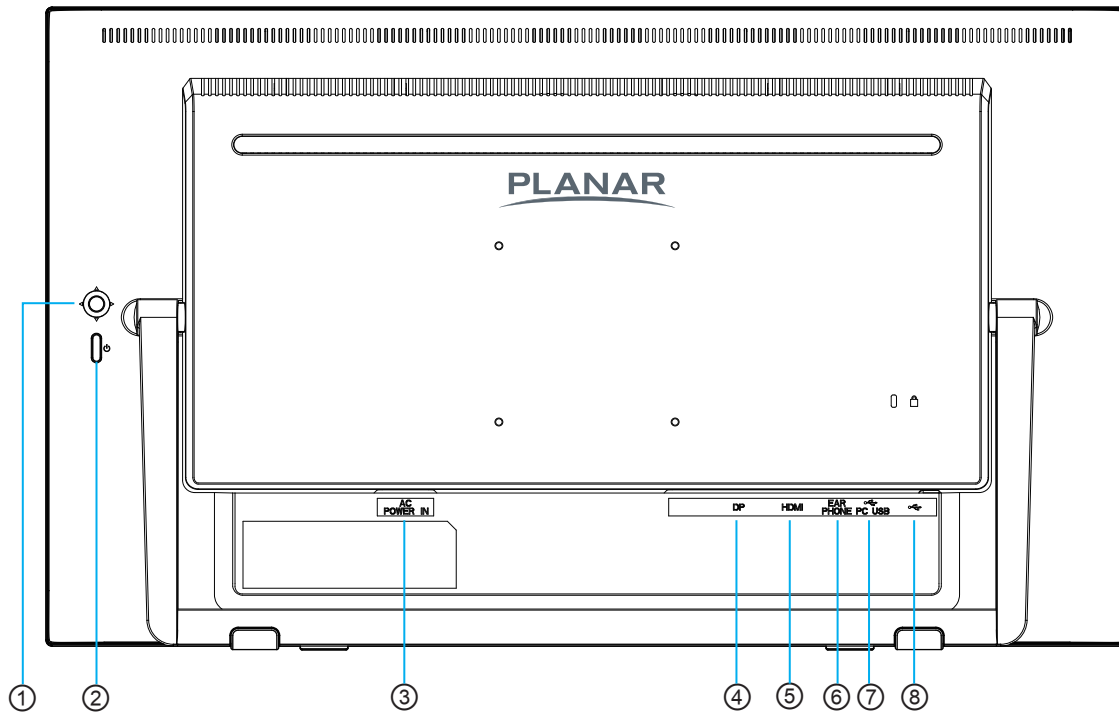


①	Function key *
②	Power button
③	Power Input
④	DisplayPort Input (DisplayPort 20 pin)
⑤	HDMI input (HDMI 19 pin)
⑥	Headphone Jack
⑦	Up-stream USB port (to PC)
⑧	USB port-A (support USB 3.0 plug play device)

\* Hot keys Instructions please see "Using the OSD Menu" on page 10.

## Quick Installation

1. Connect either HDMI or DisplayPort Video Source from the monitor to the computer. Make sure both monitor and computer are powered OFF.
2. Connect the USB cable from the computer to the monitor.
3. Connect power cord to a properly grounded AC outlet, and then to the monitor.
4. Power-ON computer and then POWER-ON the monitor.
5. Set the timing mode on your computer. Recommended resolution and refresh rate is 2560x 1440 @ 75Hz.

Figure 1:

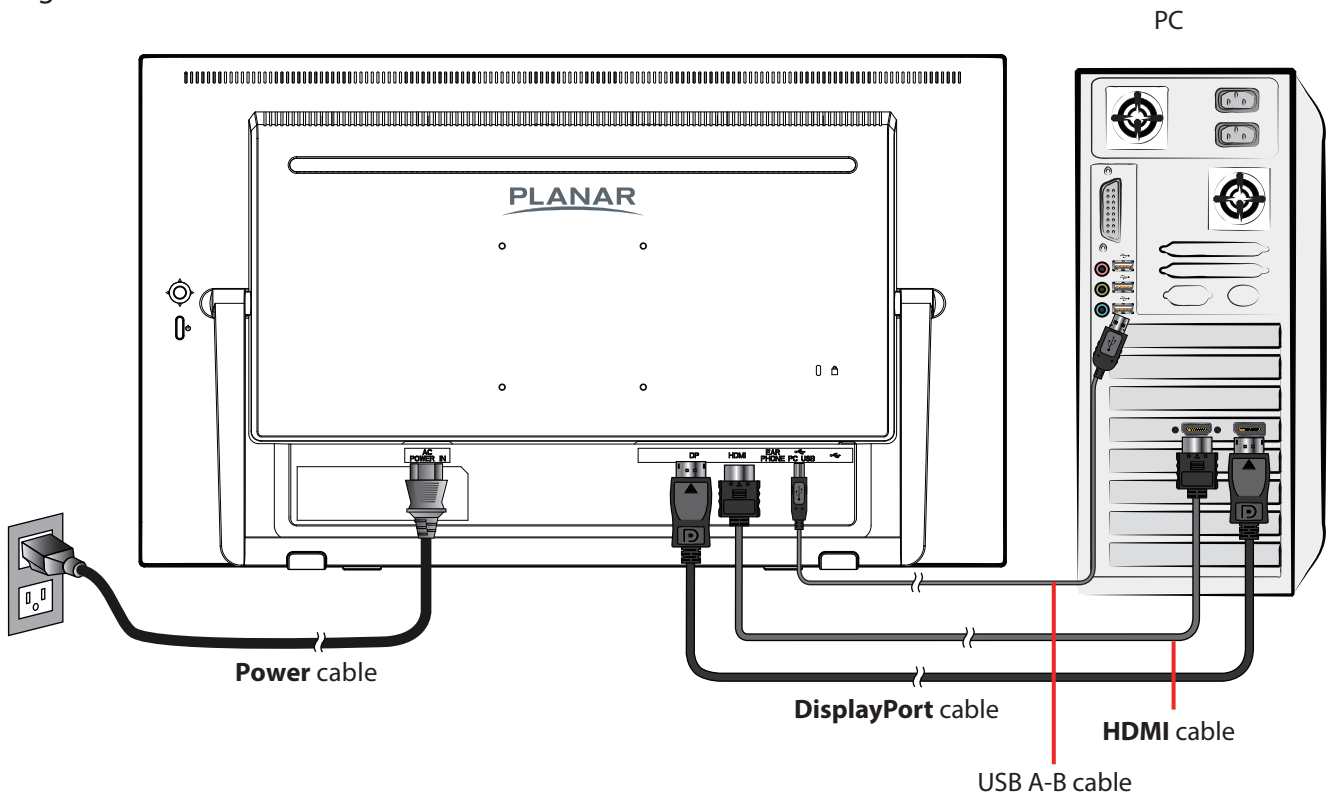


## Basic Operation and Calibration/Reset Instructions

Before using the Touch LED LCD Monitor:

- Connect external equipment properly.
- Insert the power plug, and the power LED indicator will light orange.






### Power On/Off

To turn the Touch LED LCD Monitor on/off:

Press  Power button on the back side. The power LED indicator light will be blue when the Touch LED LCD Monitor is on.

### Using the OSD Menu


Use OSD menus to adjust settings by using the menu button on the front of the Touch LED LCD Monitor.

	Selects between HDMI , DisplayPort or Auto
	Exit from OSD menu
	Displays main menu
	Enter the selection
	Select the desired item when in OSD menu
	When not in OSD menu, directly enters Audio adjust menu
	Select the desired item when in OSD menu
	When not in OSD menu, directly enters Preset mode
	Restore all preset values to the factory default settings. (when not in OSD menu)

### OSD Lock Out Function

When Touch LED LCD Monitor is in normal mode, the “OSD Lock Out” function can be enabled.

**Option 1:** OSD lock - The joystick is locked except the “POWER” button.

Press and hold the  button for 3 seconds to lock the OSD buttons.

The Touch LED LCD Monitor will show an “OSD LOCKED” message for 3 seconds and the message will disappear automatically.



OSD LOCKED

Repeat this step to unlock.

**Option 2:** OSD & Power button lock – The joystick and “POWER” button are locked. Press and hold the ► button for 3 seconds to lock the 2 buttons.

The Touch LED LCD Monitor will show a “POWER BUTTON LOCKED” message for 3 seconds and the message will disappear automatically.



Repeat this step to unlock.

### PCT2735Q Calibration/Reset Instructions:

The PCT2735Q is available with USB connection. It is Microsoft® Windows® 7, 8, 10, 11 HID (Human Interface Device) compatible if you use the USB touch screen interface. No additional software driver is required. Calibration is a simple process and can be invoked by running Tablet PC Settings from Control Panel and clicking the Calibrate button.

Click the **Reset** button to reset the touchscreen to the factory calibration settings. To reset the existing calibration data, click "**Reset**" in the Tablet PC Settings window.

### Touch support operation system

	Single Touch		Multi Touch	Plug and Play
	Mouse	Digitizer	Digitizer	
Win8/Win10/Win11	×	○	○	○
Win 7 (Ultimate/Enterprise/Professional/ Home Premium)	×	○	○	○
Win7 (Starter/Home Basic)	○	○	×	○
Android* <sub>1</sub>	×	○	○	○
Linux* <sub>1</sub>	×	○	○	○
Chrome OS* <sub>1</sub>	×	○	○	○
Mac OS* <sub>2</sub>	○	Driver required	Driver required	○

\*<sub>1</sub> : Kernel above 3.8 version.

\*<sub>2</sub> : Please download the driver form Planar website.

○: Supported


### Active Pen support

PCT2735Q is compatible with MPP2.0. MPP (Microsoft Pen Protocol) is a standard for stylus and is a protocol widely adopted across Window laptops and tablets. It provides an enhanced writing and drawing experience. Third-party MPP 2.0 pens can be used on the PCT2735Q Touch LED display.

Note: MPP2.0 is not compatible with other active pen protocols, e.g., AES standard stylus.

## Advanced Operation—OSD Menu

You can use the OSD menu to adjust various settings for your Touch LED LCD Monitor. Press the ► button to display the OSD Menu, and use ▲ or ▼ to select the desired OSD menu.

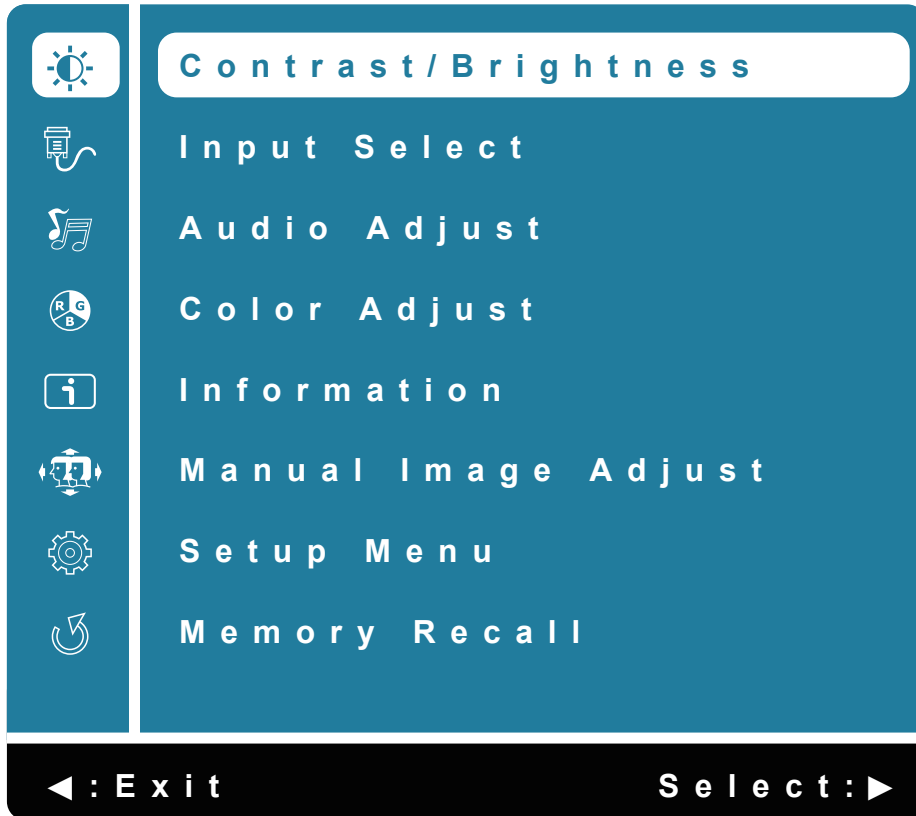

### Short Cuts Function from the button(s)



**Contrast:** To adjust the foreground white level of screen image.  
▲: increase contrast, ▼: decrease contrast.

**Brightness:** To adjust the luminance of the video.  
▲: increase brightness, ▼: decrease brightness.

**ECO Mode:** Allows the user to change the ECO mode. Contrast and Brightness adjustment will be disabled when ECO is active.  
Press ▲ or ▼ key to adjust the ECO Mode in Off/1/2/3 levels.

**Over Drive:** Allows the user to change the Over Drive strength. Improve the quality of the motion pictures.  
Press ▲ or ▼ key to adjust the Over Drive strength in Off/1/2/3/4/5 levels.



**Input Select:** When Input Select is pressed, change Input signal to HDMI, DP or Auto.



**Audio Adjust:** To adjust the audio functions.

**Volume:** To adjust the volume of speaker output.

**Mute:** To turn the Mute On/Off.



**Color Adjust:** To select the color for improving brightness and color saturation between Cool, Normal, Warm, User Color and Preset mode, Blue Light Reducer, Gamma and RGB Range.

**Cool:** Adds blue to screen image for cooler white.

**Normal:** Adds red to screen image for warmer white and richer red.

**Warm:** Adds green to screen image for a darker color.

**User Color:** Individual adjustments for red (R), green (G), blue (B).

1. Press button ► to select the desired color.

2. Press ▲ or ▼ button to adjust selected color.

**Preset mode:** Provides an optimum display environment depending on the contents displayed. It contains 5 user-selectable presets.

- **Standard** is for general windows environment and monitor default setting.

- **Game** optimized for PC game environment.

- **Cinema** optimized for movie and video environment.

- **Scenery** optimized for displaying outdoor scenery images.

- **Text** optimized for text editing and viewing in a word processing environment.

**Blue Light Reducer:** To decrease the blue light emitted from the display to reduce the risk of blue light exposure to your eyes. (Contras, Color Temperature-Cool, Normal, Warm, User Color and Preset Mode adjustment will be disabled when Blue Light Reducer is active.)

Press ▲ or ▼ key to adjust the Blue Light Reducer strength.

- Video – Ideal for watching videos (15% reduction)

- Web Browsing – Ideal for web browsing (30% reduction)

- Reading – Ideal for reading (50% reduction)

- Low Light – Ideal for low ambient lighting environments (70% reduction)

**Gamma:** To select Native/Gamma 1/Gamma 2/Gamma 3/Gamma 4.

**RGB Range:** To select Full /Limited /Auto.



**Information:** To display the information, regarding the current input signal coming from the graphic card in your computer.

**Note:** See your graphic card user guide for more information about changing the resolution and refresh rate.



**Manual Image Adjust:** To manually adjust the Sharpness and Video Mode Adjust.

**Sharpness:** To adjust the clarity of a non- QHD Resolution (2560 x1440) signal with ▲ or ▼ button.

**Video Mode Adjustment:** To select the video mode from 4:3 or Full Screen.



**Setup Menu:** To set up Language Select, OSD Position, OSD Time Out, OSD Background, LED OFF and Touch mode.

**Language Select:** To allow users to choose from available languages.

**OSD Position:** Press ▲ or ▼ button to select between horizontal and vertical OSD Position adjustment.

**OSD H. Position:** To horizontally adjust the OSD position.

▲: move OSD to the right, ▼: move OSD to the left.

**OSD V. Position:** To vertically adjust the OSD position.

▲: move OSD up, ▼: move OSD down.

**OSD Time Out:** To automatically turn off On Screen Display (OSD) after a preset period of time.

**OSD Background:** Allows the user to turn the OSD background On or Off.

**LED OFF:** Allows the user to turn the LED OFF On or Off.


**Touch Mode:** To select Touch Mode Glove / Normal.



**Memory Recall:** To recall factory settings for Video & Audio controls. Press button ► to select the Memory Recall menu option.

**Note:**

When you adjust the OSD, the following message will be displayed.

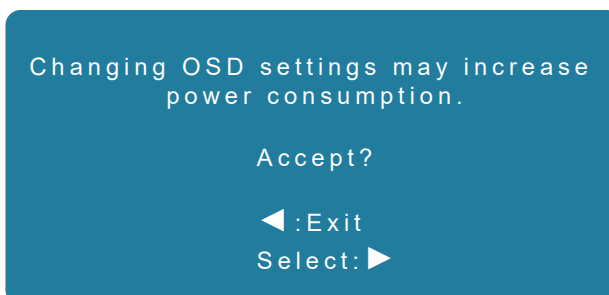



## Supporting Timing Modes

STANDARD	RESOLUTION
VGA	720 x 400 @ 70Hz
VGA	640 x 480 @ 60Hz
MAC	640 x 480 @ 67Hz
VESA	640 x 480 @ 72Hz
VESA	640 x 480 @ 75Hz
VESA	800 x 600 @ 56Hz
VESA	800 x 600 @ 60Hz
VESA	800 x 600 @ 72Hz
VESA	800 x 600 @ 75Hz
MAC	832 x 624 @ 75Hz
VESA	1024 x 768 @ 60Hz
VESA	1024 x 768 @ 70Hz
VESA	1024 x 768 @ 75Hz
VESA	1280 x 960 @ 60Hz
VESA	1152 x 864 @ 75Hz
MAC	1152 x 870 @ 75Hz
VESA	1280 x 1024 @ 60Hz
VESA	1280 x 1024 @ 75Hz
VESA	1440 x 900 @ 60Hz
VESA	1440 x 900 @ 75Hz
CVT	1400 x 1050 @ 60Hz
VESA	1600 x 1200 @ 60Hz
VESA	1680 x 1050 @ 60Hz
VESA	1920 x 1080 @ 60Hz
VESA	1920 x 1080 @ 75Hz
VESA	2560 X 1440 @ 60Hz
VESA	2560 X 1440 @ 75Hz

**Note:** HDMI and DisplayPort supports 480i, 480p, 576i, 576p, 720p, 1080i, and 1080p.

**Warning:** Do not set the graphic card in your computer to exceed these maximum refresh rates. Doing so may result in permanent damage to your Touch LED LCD Monitor.

**Avertissement :** Ne réglez pas la carte graphique de votre ordinateur pour dépasser ces taux d'actualisation maximaux. Cela peut entraîner des dommages permanents à votre moniteur LCD à LED Tactile.

## Technical Information

<b>Panel</b>	27" TFT (with LED backlight)
<b>Power Management</b>	On: 40 Watts (typical), 44 Watts (maximum) Standby Mode: < 1 Watt (USB 3.0) Off: < 0.3 Watt (USB 3.0)
<b>Displayable Resolution</b>	QHD 2560 x1440 max. Vertical Frequency 75Hz max.
<b>Pixel Dimension</b>	0.2331 x 0.2331 mm
<b>Display Color</b>	16.7M
<b>Tilt</b>	15° to 70°
<b>Active Display Area</b>	596.736 mm x 335.664 mm
<b>Temperature</b>	Operating: 0°C ~ +40°C Storage: -20°C ~ + 60°C
<b>Compliance</b>	FCC-B, CE, cTUVus, UKCA
<b>Power</b>	Input Voltage AC100-240 V
<b>Speaker</b>	1W x 2
<b>Touch Technology</b>	Multi-Touch Projective Capacitive (USB interface)
<b>Glass Coating</b>	Anti-glare

## Wall-Mount Installation Instructions

### Wall Mount Arm not included

Turn the power OFF then disconnect the cables from the Touch LED LCD Monitor before performing the procedure below.

1. Lay the Touch LED LCD Monitor face down on a soft surface.
2. Follow instructions included with the Wall Mount kit.



### NOTE

100mmx100mm VESA hole pattern (n=4), M4, pitch =0.7 mm

## **Troubleshooting**

### **No power**

- Make sure A/C power cord is securely connected to the power adapter and the power supply is firmly connected to the Touch LED LCD Monitor.
- Plug another electrical device into the power outlet to verify that the outlet is supplying proper voltage.
- Make sure all signal cables are installed.

### **Power on but no screen image**

- Make sure the video cable supplied with the Touch LED LCD Monitor is tightly secured to the video output port on back of the computer. If not, tightly secure it.
- Adjust brightness.

### **Wrong or abnormal colors**

- If any colors (red, green, blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the Touch LED LCD Monitor to another computer.

## **Planar Support**

### **Cables and Accessories**

To find cables and accessories for your Planar monitor, touch screen or other Planar products visit our online store at [www.PlanarOnline.com](http://www.PlanarOnline.com).

### **Technical Support**

Visit Planar at <http://www.planar.com/support> for operations manuals, touchscreen drivers, warranty information and access to Planar's Technical Library for online trouble shooting. To speak with Planar Customer Support please have your model and serial number available and dial:

### **Planar Support**

Tel: 1-866-PLANAR1 (866-752-6271) or +1 503-748-5799 outside the US.

Hours: 24 hours a day, 7 days a week.

Toll or long distance charges may apply.

### **European Product Database for Energy Labeling (EPREL)**

PCT2735Q Registration number: 2111891

# Planar Systems, Inc.

Customer Service

24x7 Online Technical Support: <http://www.planar.com/support>

1195 NE Compton Drive

Hillsboro, OR 97006

Tel: 1-866-PLANAR1(866-752-6271), or +1 503-748-5799 outside the United States,

Hours: 24 hours a day, 7 days a week

© 10/2024 Planar Systems, Inc.

Planar is a registered trademark of Planar Systems, Inc. Other brands and names are the property of their respective owners. Technical information in this document is subject to change without notice.



90101-37540